


PWC Proflush Model Specific Tip Sheet



Make: Yamaha
Model: XL1200T
Year: 2001
Engine Size: 1176 cc 2-stroke
Engine HP: 155

1. Hose Clamp Installation:

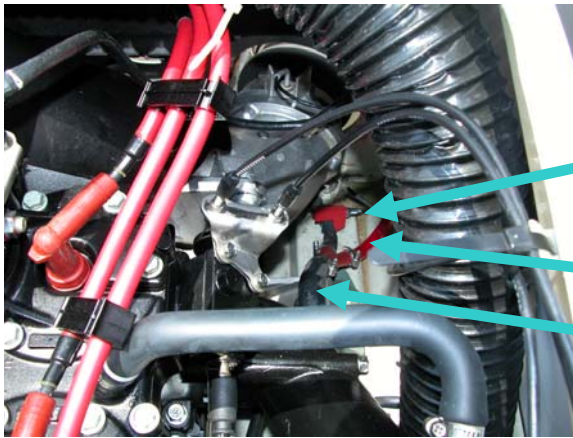

Install the hose clamp on the hose coming from the jet pump. This hose comes through the bulkhead on the port side, aft of the engine. Be sure that the clamp is installed prior to the 'y' for the flush port hose, such that flushing fluid is not blocked from reaching the engine.

Flush port hose

Fluid hose to engine

2. Connecting to the PWC Proflush:



The factory adapter threads directly to the PWC Proflush.

Plug the assembly into the flush port. The port is located under the seat, just aft of the engine compartment.



3. Process notes:

Flush per PWC Proflush user manual instructions.