

## PWC Proflush Model Specific Tip Sheet



Make: Honda (Outboard)  
Model: BF15A  
Year: 1994  
Engine Type: 4 Stroke  
Engine HP: 15


1. **Hose Clamp Installation:**  
Hose clamp not required.

2. **Connecting to the PWC Proflush:**

Connect the Honda flush adapter to PWC Proflush outlet.



Thread the flush adapter to the flush port on the side of the outdrive.

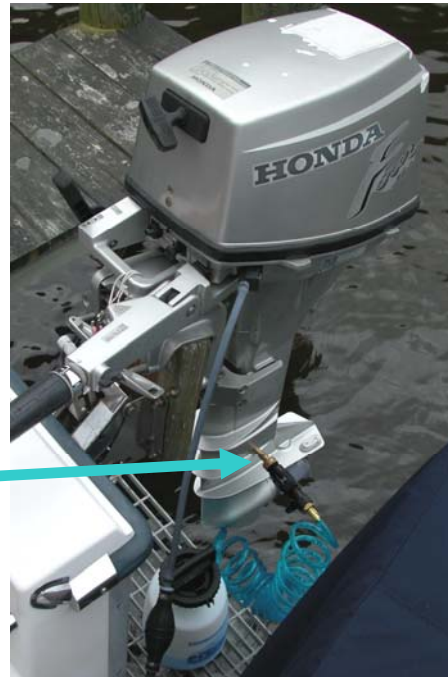

3. **Process notes:**

Start the engine, then open the on-off valve on the PWC Proflush. Allow all fluid to drain from the tank, then turn off the engine.