


# PWC Proflush Model Specific Tip Sheet



Make: Sea-Doo  
Model: RX  
Year: 2000  
Engine Size: 951 cc 2-stroke  
Engine HP: 130

## 1. Hose Clamp Installation:

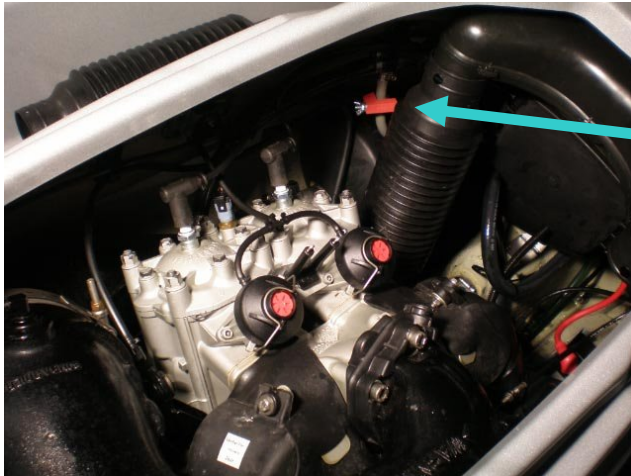

Install the hose clamp as show, on the starboard side of the watercraft.

## 2. Connecting to the PWC Proflush:



A quick disconnect (yellow parts) facilitates connection to the factory flush adapter.

Install the connectors and PWC Proflush at the flush port – port side, stern near the jet pump assembly.



## 3. Process notes:

Flush per PWC Proflush user manual instructions.